


LRX™ RAPTOR

www.lrx-lighting.com

1

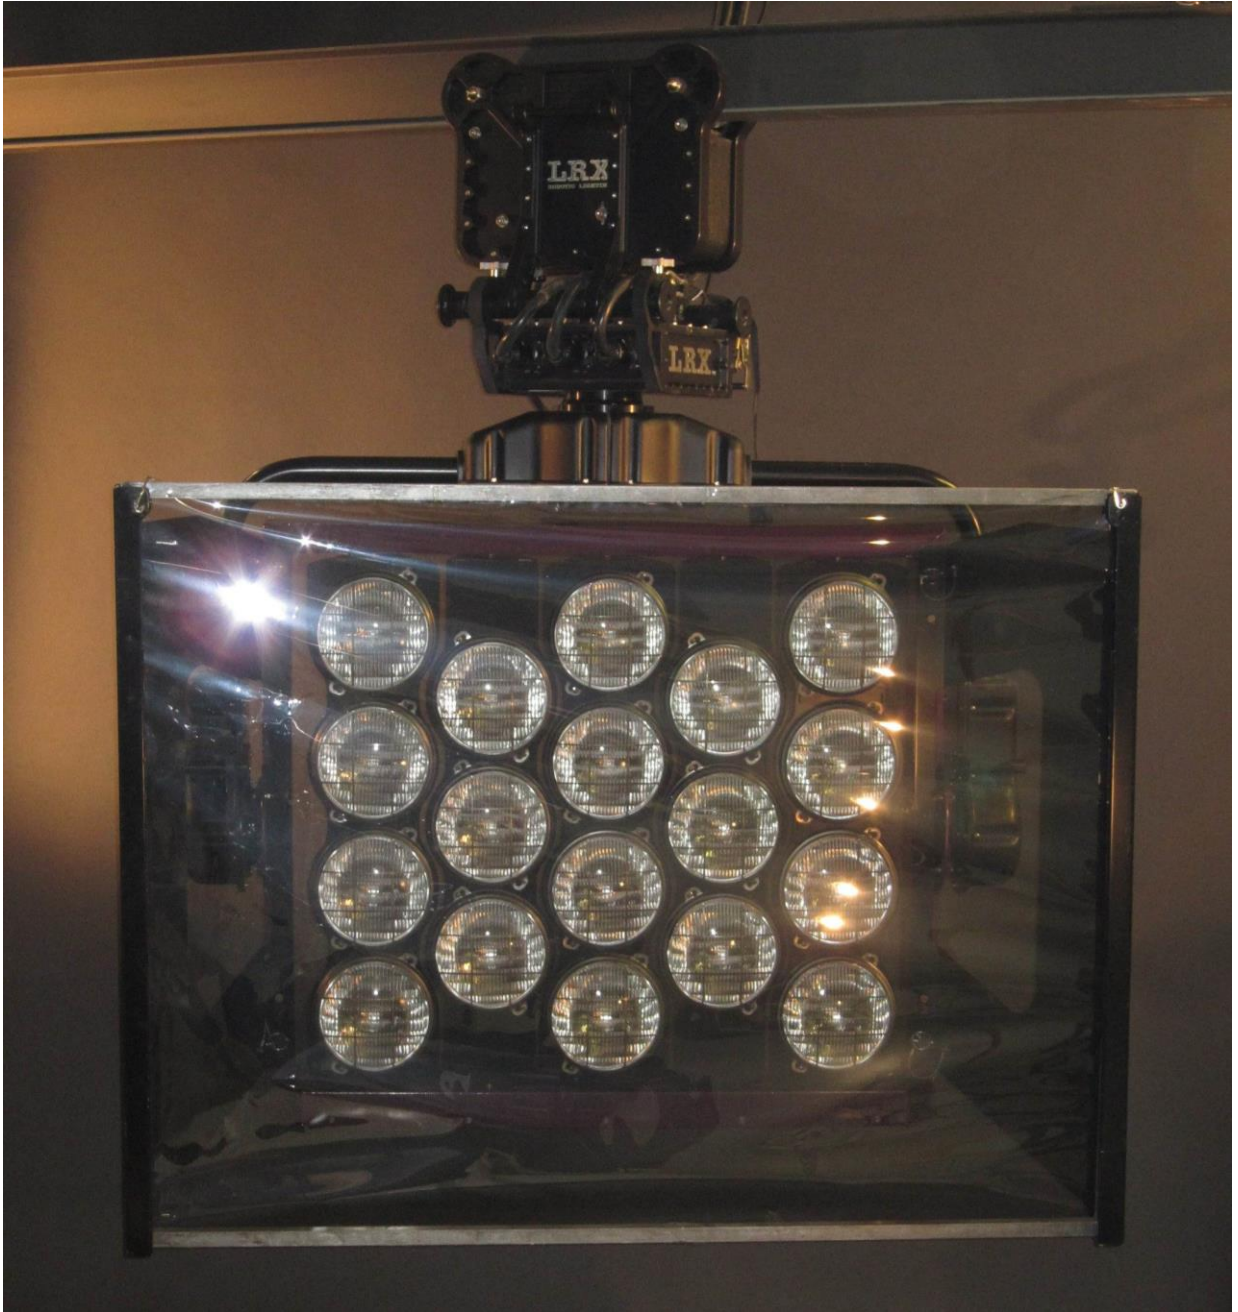

Check on line for the latest updates at www.lrx-lighting.com
SPECIFICATIONS SUBJECT TO CHANGE WITHOUT NOTICE

1



WARNING

READ EQUIPMENT MANUFACTURES
MANUAL BEFORE USING THIS PRODUCT

SAFETY INSTRUCTIONS

- User must be authorized, qualified and certified in jurisdiction of use.
- It is the user's responsibility and obligation to determine and comply with all applicable laws and regulations.
- Do not operate if unit appears damaged.
- Always use approved safety cables secured to a point capable of supporting the total weight of the load.
- In case of malfunction disconnect all power supplies, discontinue use, notify supplier.
- Area under fixture must be cordoned off at all times and kept clear of all personnel.
- Prior to operation a daily inspection and log are required.
- For handling information see page eleven.
- If using a power trolley with this fixture please refer to "LRX Power Trolley" manual.
- THERE ARE NO USER SERVICEABLE PARTS.
- IF YOU ARE UNSURE ABOUT ANYTHING SUSPEND USE OF THE PRODUCT.
- Questions contact CINELEASE LRX service representative at lrx-lighting.com and go to contact page.
- For the latest version of this manual please visit "lrx-lighting.com"



DANGER

- Dangerous voltages are present when power is supplied to the fixture.
- This fixture has more than one power supply. Disconnect all power supplies before installation or removal of the lamps.
- Ensure all power supplies are off when connecting or disconnecting any cabling.
- Ensure lamp power supply matches lamp manufactures specification.
- Always stand clear of fixture during ignition cycle.
- Power must be removed when not in use and when data signal is removed.
- Ensure fixture meets all local codes prior to operation.

Check on line for the latest updates at www.lrx-lighting.com
SPECIFICATIONS SUBJECT TO CHANGE WITHOUT NOTICE

LRX™ RAPTOR

www.lrx-lighting.com

- Safety power lockout procedures must be followed.
- Safe electrical and working practices must be observed.



WARNING

- This fixture has rotating parts with pinch points.
- Fixture may move without warning.
- No personal within range of motion
- Never operate with any covers missing.



WARNING

- High energy light output will burn skin and ignite combustible materials. Do not operate in the proximity of materials that are adversely affected by heat or light.
- Lamp housing becomes very hot when in operation.
- Never look directly at the light source
- When fixtures are mounted in close proximity to one another, care must be taken so that output energy from one fixture is not directed at another fixture or electrical cabling.

FIXTURE ADDRESSING

Fixture addressing is performed at the rear of the fixture hanger assembly. The fixture can be programmed to operate in DMX mode or FIXTURE mode (for use with the hand controller). Because each LRX fixture requires sixteen DMX channels for operation, FIXTURE mode is merely a convenient way of skipping DMX channels in 16 channel increments, beginning with DMX channel #001. Additionally, fixture mode provides power to a connected hand controller, which is also designed to work in 16 channel increments.

DMX Connector pin out: (also see important note below)

- Pin 1 = ground
- Pin 2 = Data negative
- Pin 3 = Data positive
- Pin 4 = 12VDC negative
- Pin 5 = 12 VDC positive

Check on line for the latest updates at www.lrx-lighting.com
SPECIFICATIONS SUBJECT TO CHANGE WITHOUT NOTICE

LRX™ RAPTOR

www.lrx-lighting.com

4



When the LRX fixture is in FIXTURE mode, pins 4 & 5 on the DMX IN connector become energized to 12VDC to supply power to the hand controller. No power is supplied to pins 4 & 5 when in DMX mode. Ensure that fixture is in the correct mode prior to connecting DMX lines. Always connect the hand controller to the fixture with the power off. Damage could result if attempting to connect the hand controller to the LRX fixture while the power is on.

The mode (square icon) on the left is used to toggle between DMX mode and FIXTURE mode. FIXTURE mode is designated by a capital 'F' in the left-most digit, with the remaining two digits indicating the fixture number. E.g. F01=fixture#1, etc. DMX mode is shown as a three digit number from 001 to 512. Once the mode is selected the fixture number or DMX address can be increased or decreased using the up/down arrows on right side of the switch assembly. When the correct FIXTURE/address has been selected, the store (round icon) button second from the left is pressed and held (until the display stops flashing) to store that address. *It is important to note that the LRX fixture will not begin responding to a newly selected FIXTURE/DMX address until it has been stored by pressing and holding the store (round icon) button.* If the display is flashing, this is a warning that the displayed FIXTURE/DMX address does not match the address that fixture is currently responding to. Saving the displayed address tells the fixture to begin listening and responding to the new address. If the address is not stored within five seconds it will return to the previous set

The LRX fixture always writes the last saved address and mode to non-volatile memory, such that in the event of a power interruption, the fixture will power up with the mode and address it was using before the power interrupt.


Pressing and holding the mode button will provide access to the hour meter. Once in hour meter mode press the up icon to display bulb hours, indicated as a scrolling number. It will show as a blank digit followed by three digits then a decimal place and two more digits (i.e. _120.59). The bulb hours can be reset by pressing and holding the store button until the meter zeros, about five seconds.

To display fixture hours, press the down icon. Fixture hours will be displayed as a scrolling number with an "F" prefix. This can't be reset by the user.

LRX™ RAPTOR

www.lrx-lighting.com

5

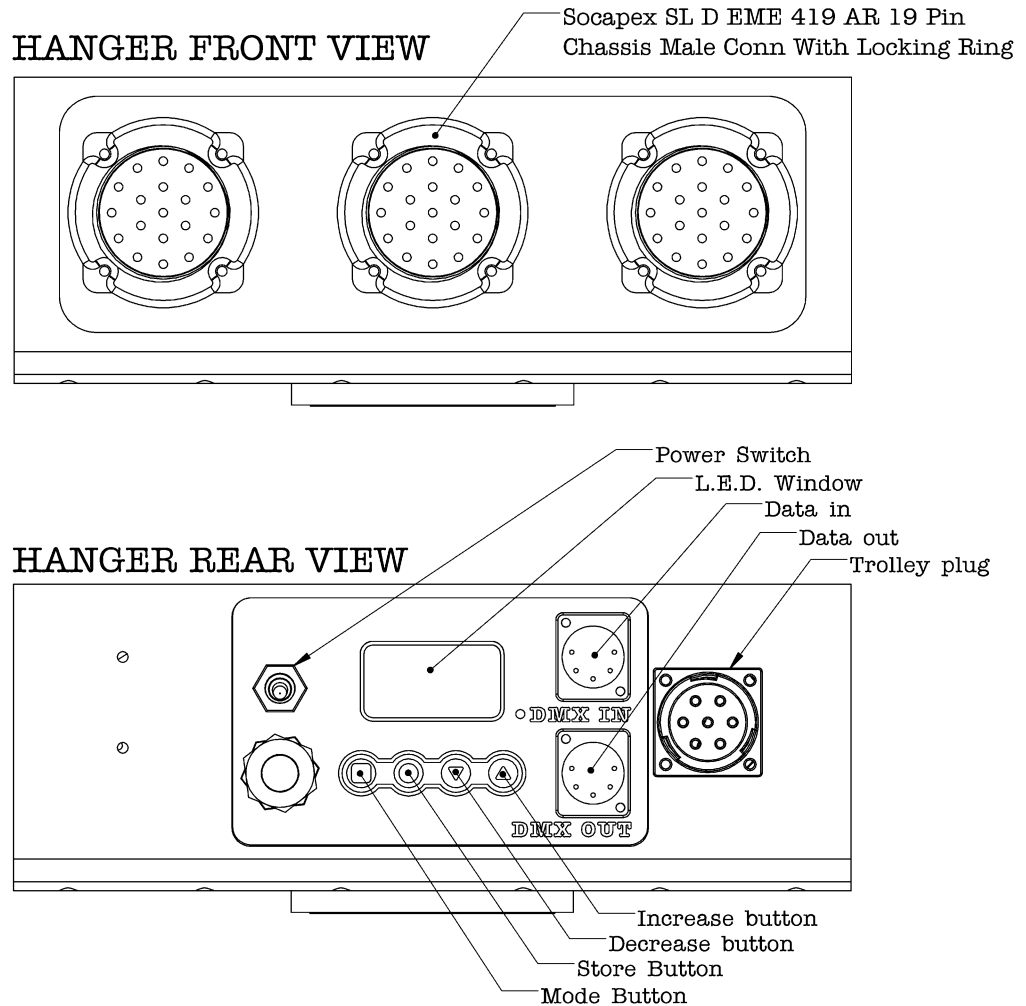

Check on line for the latest updates at www.lrx-lighting.com
SPECIFICATIONS SUBJECT TO CHANGE WITHOUT NOTICE

5

DMX CHANNEL ALLOCATION

When using the LRX with a lighting console or other device that offers discrete control over the DMX channels, they are used by the fixture as follows:

Where N = base channel of fixture. [LRX DMX address shown on display]:

N + (0-9) = motor control (depends on MODE)

N+10 = GEL fan ON/OFF (OFF < 127 ≤ ON)

N+11 = lamp control (unimplemented)

N+12 = motor control MODE: N+12 < 127 = BUMP MODE

N+12 ≥ 127 = FADER MODE

N+13 = reserved (future use)

N+14 = reserved (future use)

N+15 = reserved (future use)

If (MODE = BUMP): (n+12 < 128)


- (N+0 < 127) = pan left
- (N+1 < 127) = pan right
- (N+2 < 127) = tilt up
- (N+3 < 127) = tilt down
- (N+4 < 127) = spot
- (N+5 < 127) = flood
- (N+6 < 127) = trolley left
- (N+7 < 127) = trolley right
- (N + 8, 9) = reserved (future use)

If (MODE = FADER): (n+12 ≥ 128)

- (N+0 < 64) = pan left
- (N+0 > 127) = pan right
- (N+1 < 64) = tilt up
- (N+1 > 127) = tilt down
- (N+2 < 64) = spot
- (N+2 > 127) = flood
- (N+3 < 64) = trolley left
- (N+3 > 127) = trolley right
- (N+4 thru 9) = reserved (future use); each motor above is stopped when the fader is in the middle of its range (DMX value 64-127)

HAND CONTROLLER

The hand controller will allow fixture selection,(up to 32 fixtures), control of tilt - up/down, pan - left/right and flood/spot functions and will also shut off individual gel cooling fans or all gel cooling fans connected to that controller. All switches act as momentary type. When the “Individual Gel Fan Stop” switch is held the gel fan for the fixture indicated on the display stops. When the “All Gel Fans Stop” switch is held all gel fans connected to that hand controller will stop.

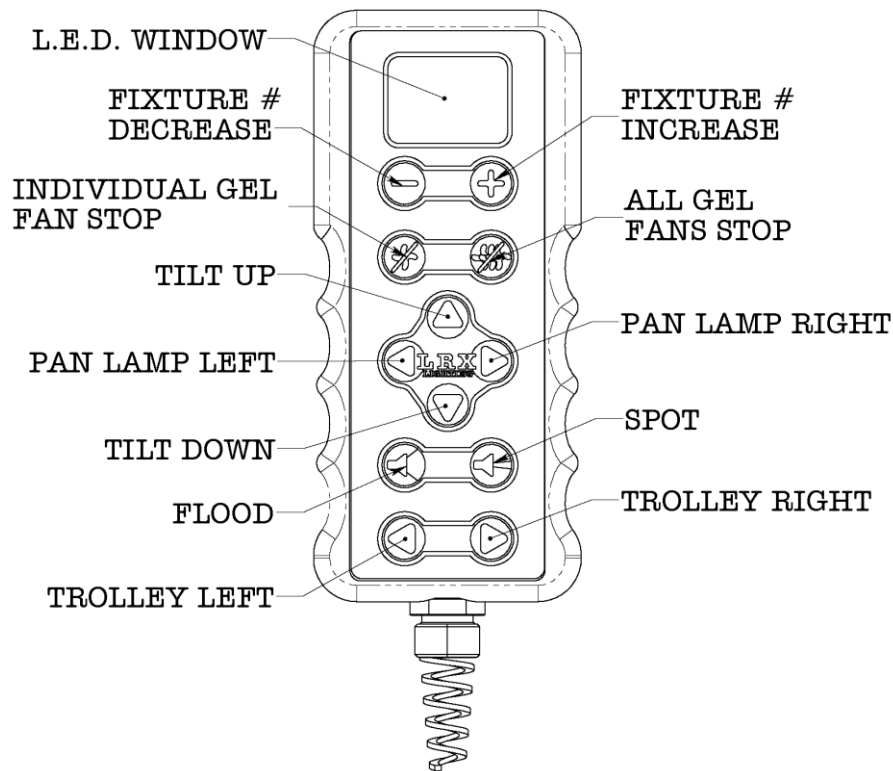

FIXTURE SPECIFICATIONS

Electrical

Control power:

- Volts: 120 AC – non dimmed feed line.
- Hertz: 50 - 60
- Amps: 2.0
- Connector: U- Ground plug/Edison plug.

Lamps:

- 500 & 1,000 Watt par 64 type lamps with a GX16D base
- Volts – 120/240 VAC
- Hertz – 50/60
- Input Connector for lamps: Socapex SL61-19 Contacts/Model: 419AR
- Quantity: Three (six lamps per connector/one lamp per circuit)

Data: DMX protocol

Data connector:

- XLR type, five pin & five wire
- Pin 1 = ground
- Pin 2 = Data negative
- Pin 3 = Data positive
- Pin 4 = 12VDC negative
- Pin 5 = 12 VDC positive


Physical:

- Tilt: Range one hundred degrees - vertical (Zero degrees) to negative one hundred and twenty degrees
- Pan: 340 degrees
- Weight: 170 pounds approximate
- Gel frames: 48" X 65"
- Fixture mounting hooks have been designed to mate with truss chords not greater than two inches (50.8mm) in diameter

LRX™ RAPTOR

www.lrx-lighting.com


9

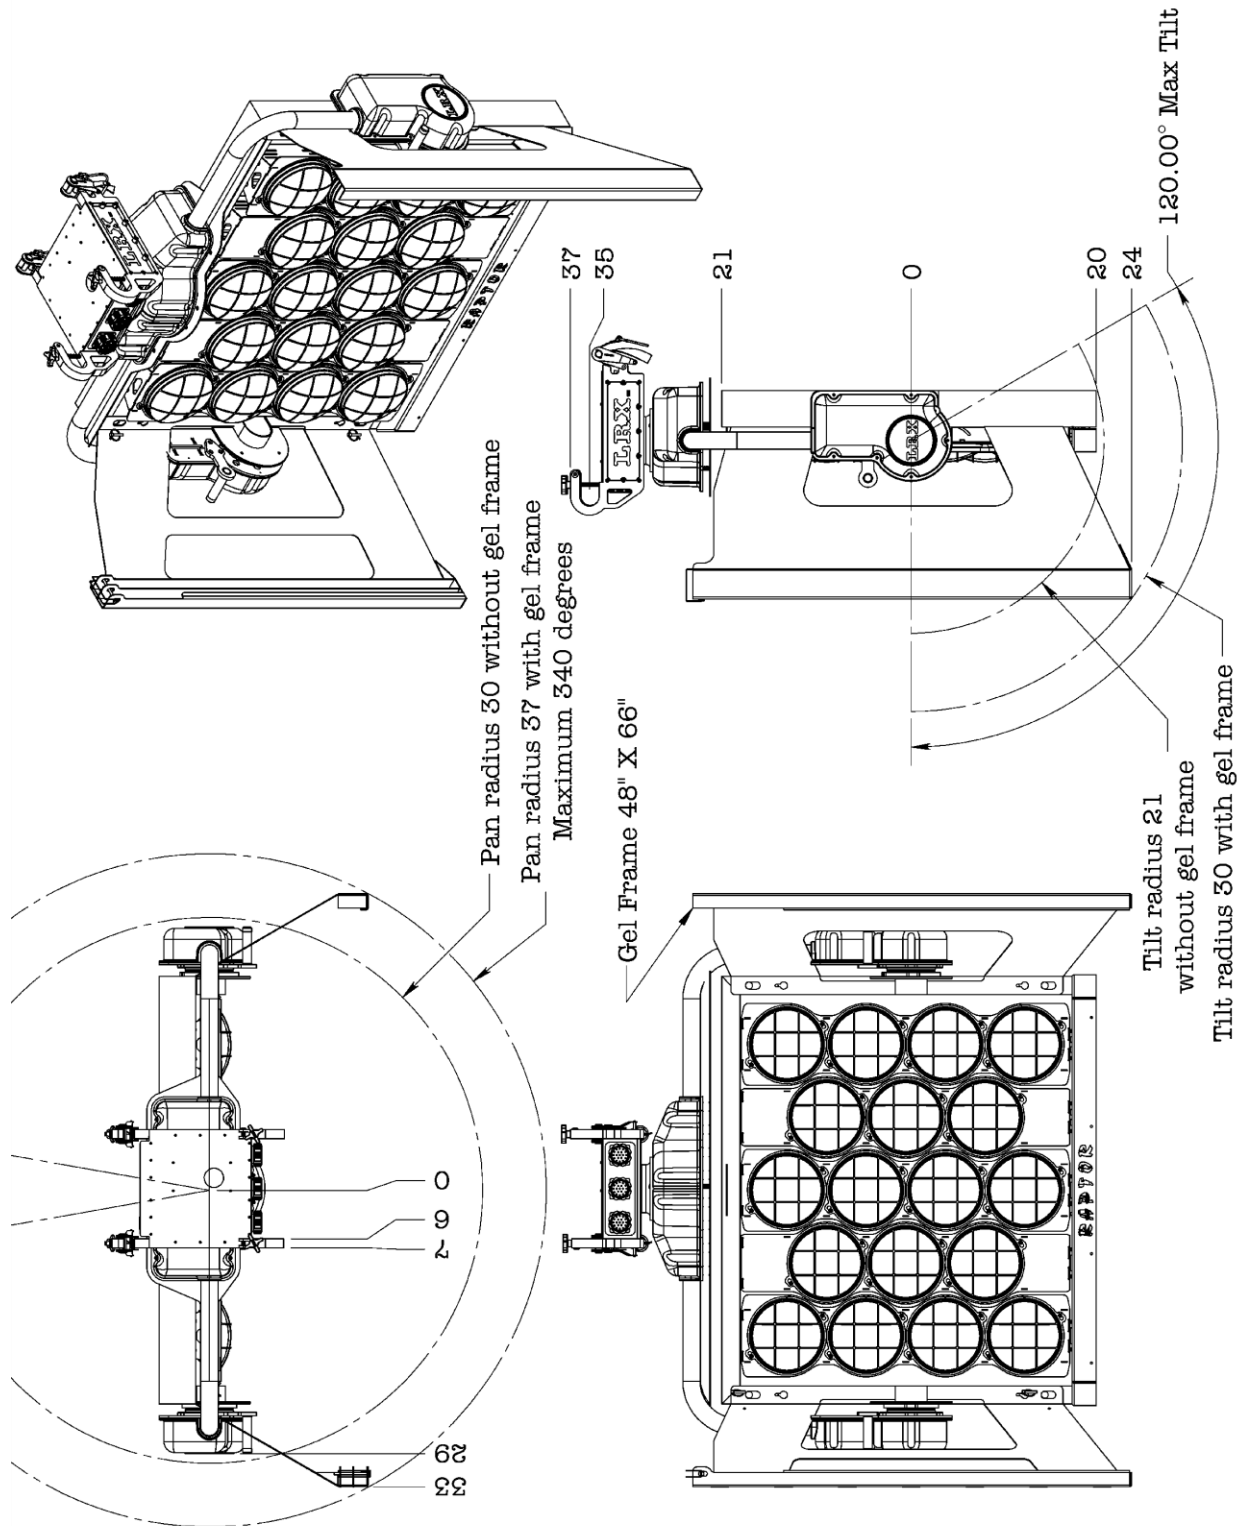


Check on line for the latest updates at www.lrx-lighting.com
 SPECIFICATIONS SUBJECT TO CHANGE WITHOUT NOTICE

9

GEL FRAMES

- To install gel frame holders, loosen four thumb screws located on the front of the fixture housing.
- Slide the keyhole slots located on the gel frame holder over the loosened thumb screws and lower into place.
- Tighten thumb screws and install the four safety clips provided.
- The outside gel slot must be used first as this will hold the two gel frame holders together. No gel material is to be used on the side of the filter frame that has been slotted. These slots will mate with bend returns on the outer most slot of the filter frame holder. See illustration.
- Install the supplied gel frame safety pins in the top two corners. See illustration.
-  SAFETY CABLES REQUIRED

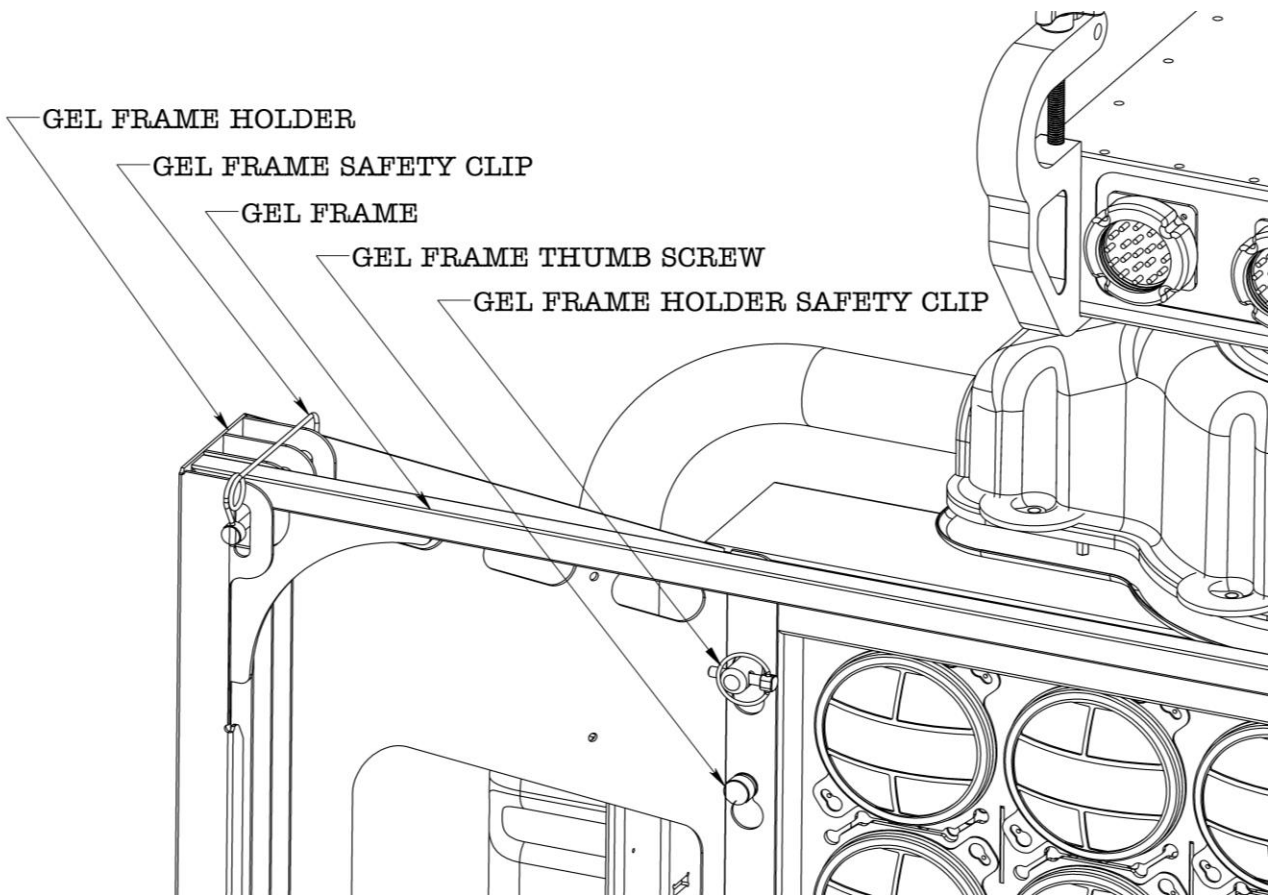

HANDLING OF FIXTURE



- Heavy lift, minimum two persons, the weight is approximately 170 pounds.
- Hanging of the fixture creates a number of potential pinch points.
- Use fixture lifting handles provided as well as the yoke tubes.
- If there are any concerns regarding handling please contact your supervisor.
- Ensure hanger bolts are installed immediately after hanging, before the ratchet straps are tensioned.
- Ratchet straps must have a minimum of one and a half wraps around the ratchet drum at all times.
- Removal of shipping case covers require two persons to lift. Always use lifting handles provided to avoid potential pinch points.




Fixture lifting points
Fixture approximately
170 pounds

LRX™ RAPTOR

www.lrx-lighting.com


Notice, to enable the fixture to fit into the shipping case:

- Tilt fixture so that panel is vertical.
- Pan fixture so that it is pointed straight ahead.
- Install onto shipping frame, tighten hanger bolts and ratchet straps; ensure there is a minimum of 1.5 wraps on the ratchet drum.
- Secure gel frame holders using the Velcro straps provided in the shipping trays.
- Place hand controller into Pelican case and place in tray.
- Hang DMX cables on shipping stand.
- Always store equipment in a dry location.

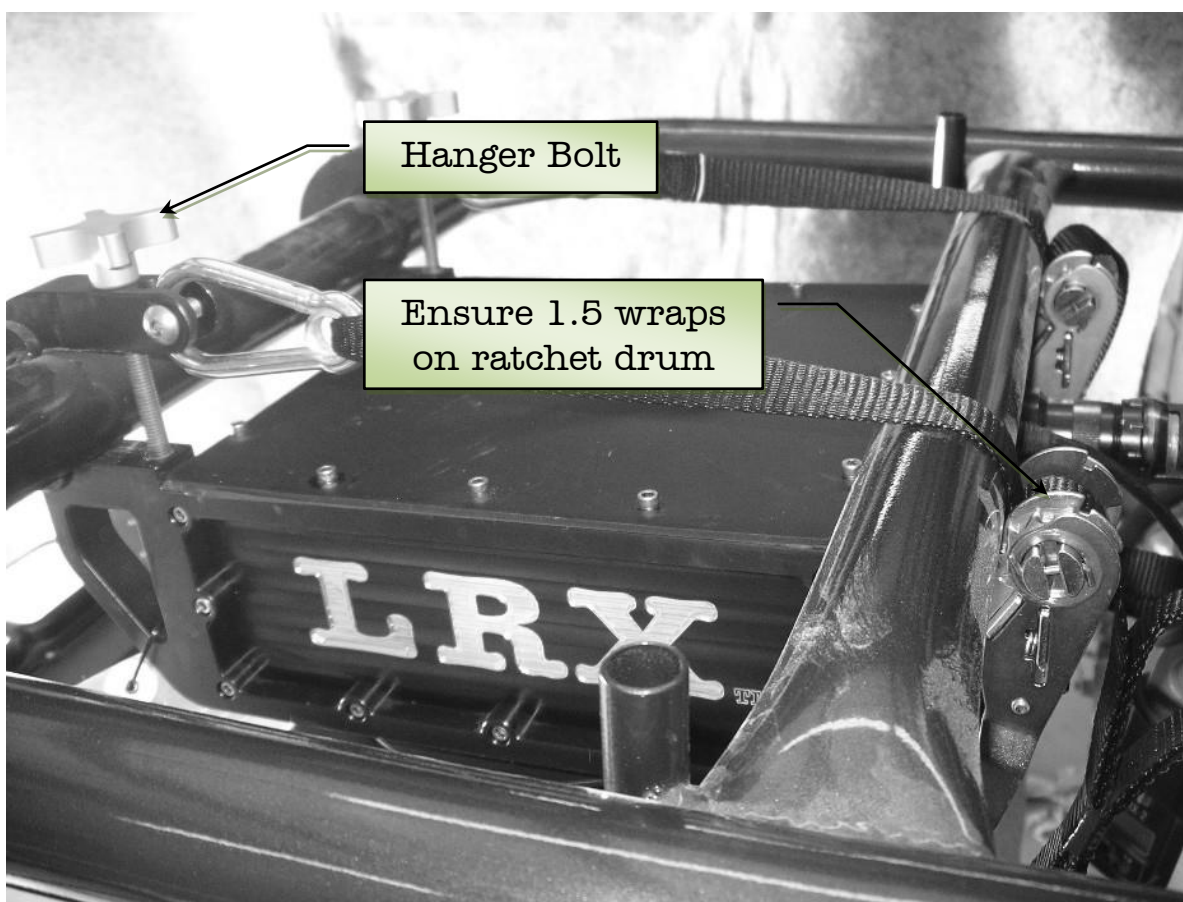

Check on line for the latest updates at www.lrx-lighting.com
SPECIFICATIONS SUBJECT TO CHANGE WITHOUT NOTICE

LAMP INSTALLATION

-  A number of hazards exist during lamp installation please refer to safety warnings on page two.
- Follow lamp manufactures instructions regarding use and handling of their product.
- This fixture has more than one power supply. Disconnect all power supplies before installation or removal of the lamps.
- Allow lamps to cool before removing.
- Loosen the two screws that hold the lamp retaining ring, then rotate ring to remove.
- Prior to installing the lamp, check lamp contacts and wire ends for signs of arcing or over-heating. If lamp contacts or wiring appear damaged remove from service.
- Ensure power supply matches lamp type, voltage and wattage.



INSTALLATION OF FIXTURES ON TRUSS, I-BEAM OR TELESCOPIC TYPE MAN LIFTS

- THIS FIXTURE MUST BE MOUNTED ON A LEVEL TRUSS.
- Installation structure must be designed and approved to safely carry all anticipated loads.
- It is the user's responsibility and obligation to determine and comply with all applicable laws and regulations.
- The installation and operation of this unit must be carried out by authorized and qualified personnel.
- Hanger bolts in hanger assembly must be installed. Both ratchet straps must be clipped onto their respective anchor point.
- Ratchet straps require minimum of 1.5 wraps on the ratchet to ensure they remain tight.
- Always use approved safety cables secured to a point capable of supporting the total weight of the load.
- All power and data cables must have a strain relief attached.
- When fixtures are mounted in close proximity to each other, care must be taken so that output energy from one fixture is not directed at another fixture or electrical cabling.
- Power trolleys must have positive mechanical stops on beams.
- If cable rollers are required refer to "LRX Cable Roller" manual.
- If LRX truss is to be installed, ensure that load is centered and evenly applied to basket. Maximum capacity for LRX truss is 500 pounds evenly distributed.
- Never use damaged or compromised trusses or equipment.
- Follow all lift manufactures guide-lines for load/wind capacities and de-rating as required. Refer to the aerial equipment operator manuals & special supplement for "Authorized and Trained Set Lighting Technicians and Studio Grips".

LRX™ RAPTOR

www.lrx-lighting.com

Using two truss plates (1/2" X 3") per side, a minimum of two structural members must be captured. Fasten using 1/2" X 4" bolts with washers, lock washers and nuts – four places

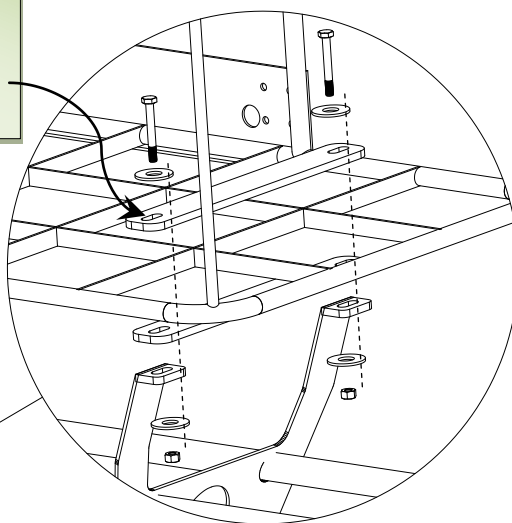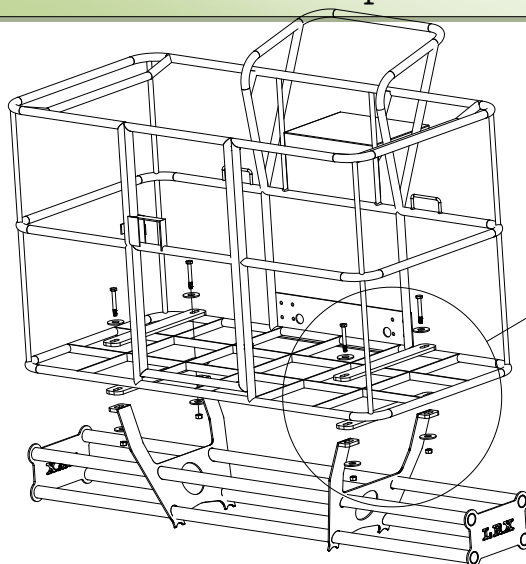

Load must be centered front to back as well as side to side



Truss approximately 60 pounds

Raptor approximately 170 pounds

Check on line for the latest updates at www.lrx-lighting.com
SPECIFICATIONS SUBJECT TO CHANGE WITHOUT NOTICE

TROUBLE SHOOTING GUIDE

NO DISPLAY AT REAR OF HANGER ASSEMBLY

- Ensure 120vac power to fixture is live and on a non-dimmed line.
- Remove DMX connectors and inspect contact pins for damage and signs of corrosion
- Inspect 120 volt U ground supply wire for cuts or mechanical damage
- Inspect U ground plug contacts.
- Power switch is on (up position)

FIXTURE DOESN'T RESPOND TO ANY FUNCTIONS REQUESTED FROM HAND CONTROLLER

- Establish power is correct and display is functioning properly, see above.
- Test with another hand controller if available. If still unresponsive proceed to next step.
- Remove DMX connectors and inspect contact pins for damage and no signs of corrosion. Note all five wires and pins are required to operate hand controller.
- Check hanger display for proper addressing and mode. For use with hand controller the fixture display must show the "F" prefix; not the three digit DMX channel and the display must not be flashing.
- It is important to note that the LRX fixture will not begin responding to a newly selected FIXTURE/DMX address until it has been stored by pressing and holding the store (round icon) button. If the display is flashing, this is a warning that the displayed FIXTURE/DMX address does not match the address that the fixture is currently responding to.
- Plug hand controller directly into fixture, at this point the hand controller should light up and DMX light on the fixture should also light up. At this point if the unit is not operational test with another hand controller.
- Ensure the address at the fixture matches the address on the hand controller.
- If still not operational, place fixture into DMX mode and test with an alternative DMX source.
- Call for service

LRX™ RAPTOR

www.lrx-lighting.com

TILT, PAN OR FOCUS MOTOR NOT OPERATING CORRECTLY.

Head moves freely without control:

- This may indicate the fixture has received impact and the drive gear has been damaged or drive may have become disengaged.


Head not moving on one axis but other axis is fine

- Test with another hand controller if available. If still unresponsive proceed to next step.
- This may indicate the fixture has received impact and the drive gear has been damaged or drive may have become disengaged.
- Actuate drive function and listen for motor operation. The tilt and pan drive assemblies use a slip clutch inline between the motor and drive gear as a protective measure, this clutch will slip and make a clicking sound once each revolution when driven by the motor, if the clutch has exceeded its preset limits.
- If any of these conditions exist, suspend use of the product and call for service.
- There are no user serviceable parts.

LAMPS NOT WORKING

- Check Soca extension cables and fixture panel mount connector pins
- Ensure correct lamp input power is available at head cable.
- Check lamps, socket contacts and wiring.

TROLLEY DOESN'T RESPOND

-  Dangerous voltage present at socket.
- Test with LRX hardwired trolley hand controller. If it now works problem with fixture, hand controller, lighting console.

Check on line for the latest updates at www.lrx-lighting.com
SPECIFICATIONS SUBJECT TO CHANGE WITHOUT NOTICE

Read and understand LRX Raptor Manual before proceeding with daily checklist and/or operation of any LRX fixture. Manual available in fixture transport case or online at www.lrx-lighting.com.



LRX RAPTOR DAILY CHECKLIST

CUSTOMER: _____

DATE: _____

LOCATION: _____

FIXTURE SERIAL #: _____
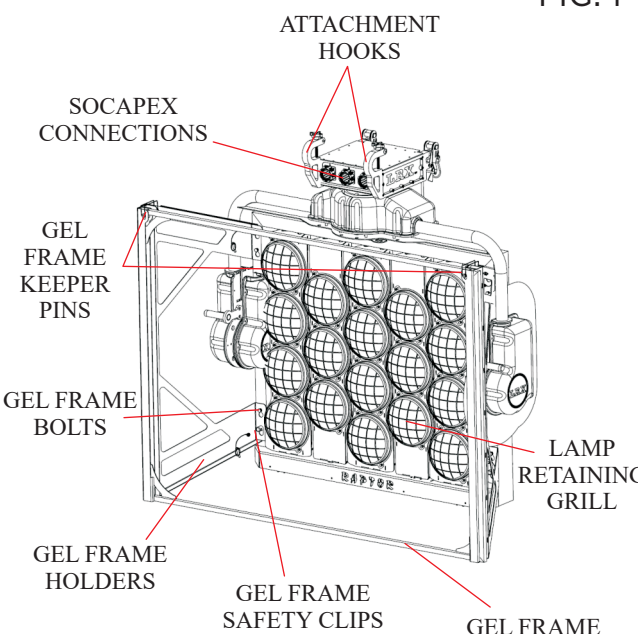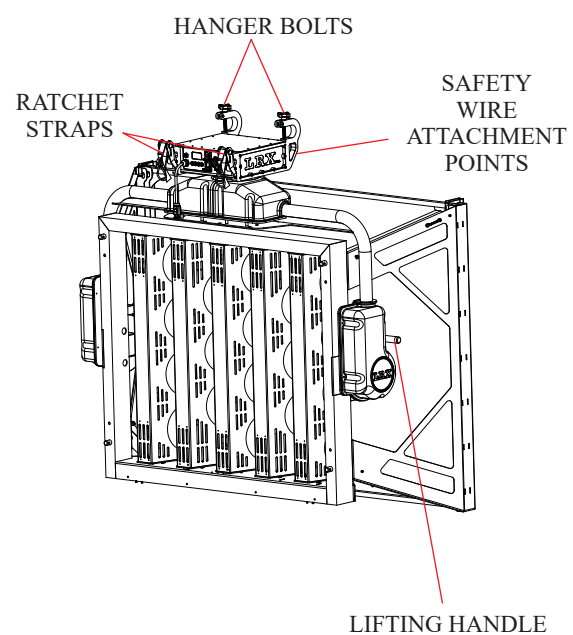
#	HEAD STRUCTURAL INSPECTION	GOOD / FAIL	REFERENCE IMAGES
1.	Inspect fixture attachment hooks and head structure for damage, cracks or loose bolts.		 <p>FIG. 1</p>
2.	Inspect ratchet straps. There must be a minimum of two wraps around each ratchet drum. Ensure the straps capture truss and strap clips are correctly placed and latched.		
3.	Ensure hanger keeper bolts are installed completely.		
4.	Inspect overall condition of fixture / structure.		
5.	Ensure all covers are installed and in good condition.		
6.	Inspect all lamps, retaining grills and mounting hardware.		
7.	Inspect lamp sockets, contacts and wires.		
8.	Inspect gel frame receivers.		
9.	Inspect gel frame holders and mounting hardware.		
10.	Inspect Socapex cable input connectors and contacts.		
11.	Inspect data connectors and contacts.		
12.	Inspect condition of U ground plug, wire and strain relief.		
13.	Provide safety cables where required for accessories.		
14.	Ensure no components have been modified outside of manufactures specifications.		
#	TRUSS CONNECTION POINT	GOOD / FAIL	 <p>FIG. 2</p>
15.	Inspect truss for damage, cracks, dents, distortion.		
16.	Inspect truss mounting plates for damage, cracks and distortion.		
17.	Inspect all fasteners and hardware for damage and ensure all fasteners are secure.		
18.	Inspect truss supporting structure and capacity.		
#	CABLES	GOOD / FAIL	
19.	Inspect data cable, connectors and contacts for damage.		
#	POWER UP CHECKS	GOOD / FAIL	
20.	Ensure all power and data cables are correctly connected to fixture.		
21.	Ensure proper electrical power is supplied.		
22.	Ensure all power and data cables have a secure strain relief.		
23.	Ensure hanger LED display and keypad operating properly.		
24.	Inspect hand controller for damage and proper function.		
25.	Test tilt, pan and flood / spot function.		
Notes:			

Confirm the combined weight of all accessories are within the allowable weight restrictions of the aerial lifting device or supporting structure.

INSPECTED BY: _____ SIGNATURE: _____

IF THE FIXTURE FAILS ANY PART OF THIS INSPECTION, REMOVE POWER, LOCK OUT AND REPORT TO YOUR SUPERVISOR IMMEDIATELY. DO NOT ATTEMPT TO MAKE REPAIRS, ALL REPAIRS TO LRX LIGHTING FIXTURES ARE TO BE PERFORMED BY AN LRX AUTHORIZED DEALER ONLY.