



CUSTOMER: _____
 DATE: _____
 LOCATION: _____
 SERIAL #: _____

Read and understand manual before proceeding with daily checklist.
 Latest manuals available online at www.dwightentertainment.com

#	FLYSWATTER - UPPER ASSEMBLY	PASS/FAIL
1.	Upper assembly checked for cracks, deformation or other damage.	
2.	Upper assembly to lower assembly bolts tight - check witness marks.	
3.	Fork pockets undamaged.	
4.	Chain (3/8" grade 80) inspected for cracks, deformation or other damage.	
5.	Shackles (1.5 ton) inspected for missing parts, cracks, deformation, or other damage.	
6.	Shackle pin wired shut so that it is unable to turn out.	
7.	Ratcheting 3/8" load binder inspected for cracks, deformation or other damage.	
8.	Chain tie down lugs inspected for cracks, deformation or other damage.	
9.	Chains routed to lock forks and Fly Swatter Rotator to fork carriage.	

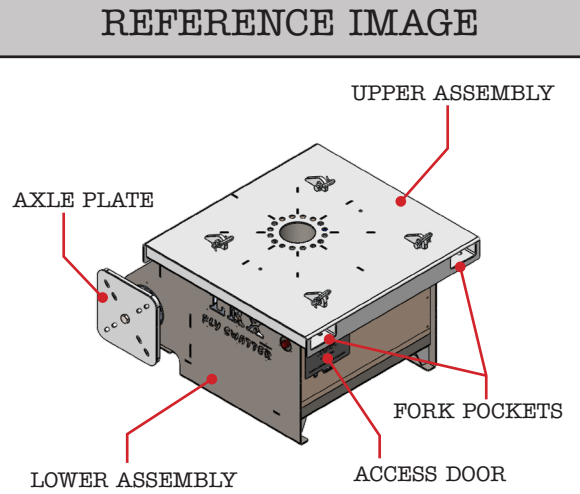

#	FLYSWATTER - LOWER ASSEMBLY	PASS/FAIL
1.	Truss to Axle Mounting Bolts (5/8" x 2.5" grade 8) with nuts & oversized washers secure.	
2.	Axle output plate to axle shaft bolts present & tight - check witness marks.	
3.	Check axle shaft for cracks, deformation or other damage.	
4.	Check axle output plates for cracks, deformation or other damage.	
5.	Axle bearing bolts tight - check witness marks.	
6.	All covers undamaged and secure.	
7.	Battery charger cord and plug end in good condition.	
8.	Hand Controller, cord and connectors in good condition.	
9.	Function test assembled unit.	

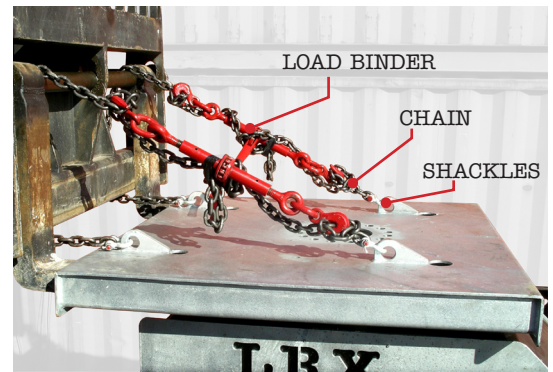

PREFERRED TRUSS DESIGNS

OPTION 1

Typical Single Stick Truss Install

NOTES:
 Important: Tilt angle of motion will be limited to 90 degrees assembly as shown.
 4" Center Section Truss MUST be installed.
 Truss structure by others, to be approved by a professional engineer or safety survey and inspected loads.
 Fly Swatter, Loadholder, Truss structure & wind loading calculations are the responsibility of the user.

Size truss and frame specified by others

SCALE: 1:16

Box truss APN number, MUST BE INSTALLED

LRX Fly Swatter Offset Plate - 2 pieces

Install with 5/8-11 X 8.0" all thread grade 8 lock assemblies

DWIGHT CRANE | LRX FLYSWATTER
 APPROVED TRUSS CONFIGURATIONS

OPTION 2

GO TO DWIGHTENTERTAINMENT.COM FOR MORE INFORMATION

IF THERE ARE ANY DEFECTS IMMEDIATELY SUSPEND USE OF PRODUCT

Notes: _____

USE BACK OF SHEET IF MORE NOTES REQUIRED

Questions? Contact Dwight Crane Ltd., for details visit www.dwightentertainment.com, click on contacts

INSPECTED BY: _____ SIGNATURE: _____

REPORT ANY DEFECTS TO YOUR SUPERVISOR. DO NOT ATTEMPT TO MAKE ANY REPAIRS. REFER EQUIPMENT FOR REPAIR TO LRX LLC. ONLY.